

Návod, kde je najít motohodiny na ovladači robota:

Ovladač SP1 (CS8, CS8C ....)

```

=====10%=====
=Main menu=====
Application manager
Task manager
Control panel
Calibration
Events logger
=====10%=====
=Control panel=====
+Controller status
+Controller configuration
    
```

```

=====10% IO=====
=Control panel=====
-Controller status
  Hardware Safety Fault: No fault
+I/O
+Joint position
+Joint velocity
+Max manual joint velocity
+Cartesian position
+Drives Information
+Sensors status
Arm time 0:00:00
Cabinet Temperature : 28°C 82.4°F
Free Memory : 2147483 Kb
Free Disk Space : Info not available
    
```

Ovladač SP2 (CS9)

JOG 	VAL3 	LOGGER 	Calibration 	Phasing 	Brakes 	<table border="1"> <thead> <tr> <th colspan="2">INFORMATION</th> </tr> <tr> <td>All</td> <td>No Filter</td> </tr> </thead> <tbody> <tr> <td>Arm Mounting</td> <td>floor</td> </tr> <tr> <td>Arm Name</td> <td>?</td> </tr> <tr> <td>Arm OilType</td> <td>?</td> </tr> <tr> <td>Arm S/N</td> <td>?</td> </tr> <tr> <td>Arm Time</td> <td>0:00:00</td> </tr> <tr> <td>Arm Tuning</td> <td>R2</td> </tr> <tr> <td>Arm Type</td> <td>tx2_40-53</td> </tr> </tbody> </table>	INFORMATION		All	No Filter	Arm Mounting	floor	Arm Name	?	Arm OilType	?	Arm S/N	?	Arm Time	0:00:00	Arm Tuning	R2	Arm Type	tx2_40-53
INFORMATION																								
All	No Filter																							
Arm Mounting	floor																							
Arm Name	?																							
Arm OilType	?																							
Arm S/N	?																							
Arm Time	0:00:00																							
Arm Tuning	R2																							
Arm Type	tx2_40-53																							
IO 	ROBOT 	SETTINGS 	Information 	Recorder 	Safety 																			
			References 	Limits 																				